

ARIA

Sinsonido Guitar

(AS-100S: Steel Strings) (AS-100C: Nylon Strings)
(AS-690B: Bass)

Licensed by SoloEtte USA REG. NO. 2401468

 
 
Owner's Manual

1. Features of ARIA Sinsonido Guitar
2. Names
3. How to install the Frames
4. Connection of cables
5. Adjustment of Controls

Thank you for purchasing ARIA Sinsonido Guitar.
Please read this Owner's Manual thoroughly to enjoy
your ARIA Sinsonido Guitar for years to come.

1. Features of ARIA Sinsonido Guitar
ARIA Sinsonido guitar is light and compact. The two frames can be easily installed and removed and put into a compact carrying bag. You can play it through stereo headphone in night time and in anywhere, and also you can plug into a guitar amplifier directly. The newly developed pickup/bridge gives a beautiful natural sound.

2. Names [FRONT]

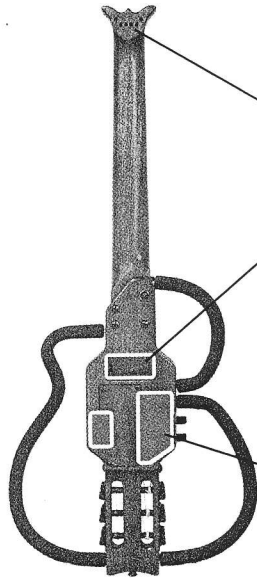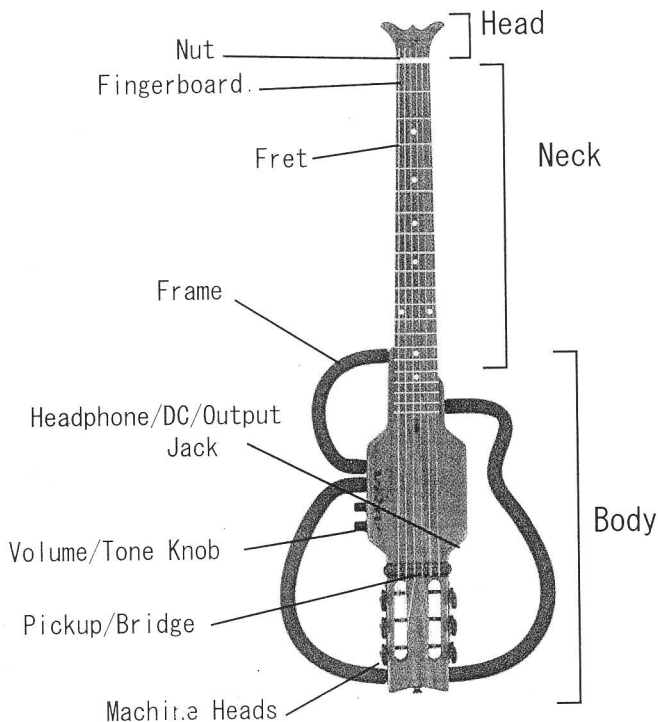


[BACK]

Strings Slot: ARIA US-440BE Ball-End strings are recommended on AS-100C, US-200XL on AS-100S, and US-600 on AS-690B.

Battery Panel: ARIA Sinsonido guitar/bass uses a 9V battery. Open the battery panel and replace the battery when the following symptoms are noticed: weak output, more noise, mono instead of stereo, etc.

Control Panel

 IMPORTANT: To prolong the battery life, remove instrument/headphone cable from the output/headphone jack when not use.

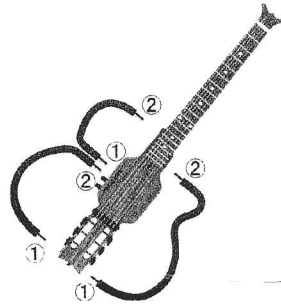

- 3. How to install the Frames**
Push the ② end of the right and lower left frames about halfway into the mount holes and then all the way at the same time
For removal, pull the ① end of the frame first and then the ② end.

4. Connection of cables

DC-In:

 
Connect an AC adaptor (sold separately). 9V/200mA AC adaptor is recommended.

Headphone: - tie

Connect a headphone or a guitar cable into an amplifier.

Output Jack:

Plug in to a guitar amplifier using a regular guitar cable.

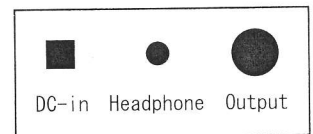


5. Adjustment of controls

Volume:

Adjusts overall loudness.
Louder when rotated clockwise.


Tone:

 Adjusts overall brightness.
Brighter when rotated clockwise.

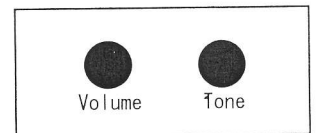

6. How to wind strings (AS-100C, C/SPL)

 Pass a string through center hole of machine head. Then tie the string on the pole of machine head.



[as100_690b_manual_e2007]

ARIA & CO., INC.