

AEQ-4 Instruction Manual



TUNER : Turn on the Tuner.

VOLUME : Adjust Volume.

BASS: Boost/Cut Low Frequency.

MIDDLE: Boost/Cut Middle Frequency.

TREBLE: Boost/Cut High Frequency.

PRESENCE: Boost/Cut Super High Frequency.

NOTCH: Cut the frequency which causing feedback. Normally used in Zero.

LOW BATTERY LED: Light will be blinking when the battery is low.
It is time to change the Battery.

TUNER

- ① Press the tuner button and turn on the tuner.
- ② Hit the string, then closest Pitch will be shown on the display.
- ③ Tune the strings according to the display.
(Ex: 5th string is "5A" . and "0" is on Pitch.)
- ④ After Tuning press the tuner button and turn off the tuner.

Note: Tuner need approx 3 seconds to reset the circuit. Tuner might not work if you turn off and on again within 3 seconds. However this is not a malfunction. Please wait for 3 sec and turn on the tuner again.

Battery: 006P9V

When the battery is flat output and tuner function will not work.

When the battery is low, it might cause some noise or less out put level.

That show the sign to change the battery.

It consumes battery power when the cable is plugged-in or tuner is on.

It is recommended to plug-off the cable and off the tuner when it is not in use.